



Feb 20, 2001

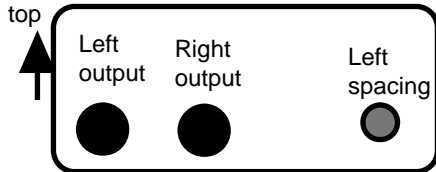


back view of box




left side view of box

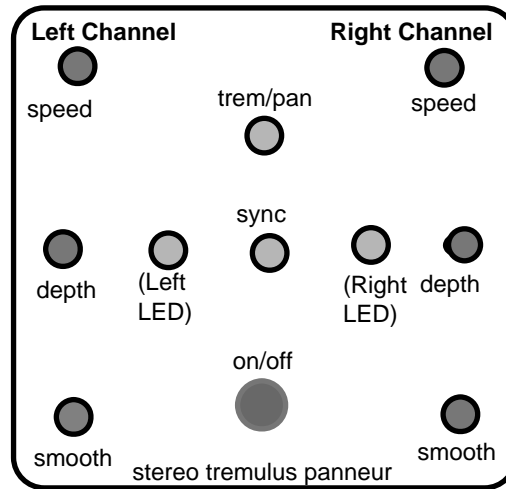



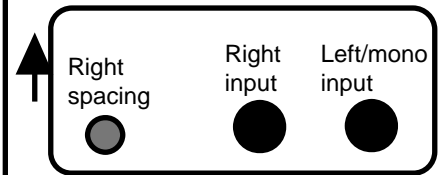

top view of box

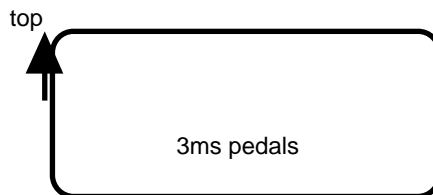

right side view of box



front view of box

-  Use 17/64" bit for switches and power jacks
-  Use 19/64" bit for pots
-  Use 3/8" bit for jacks
-  Use 1/2" bit for stomp switch

Always drill a small (1/8" or less) pilot hole first